

67-68 Mustang  
Left Side

## Regulators with Spring Assist Instructions - USE CAUTION

The front regulators are spring loaded. USE CAUTION

1. Note the Safety Bolt as labeled on regulators
2. DO NOT remove the safety bolt unless the motor is attached.
3. Leaving the safety bolt attached: remove the motor, place the regulator in the door, reinstall the motor.
4. You may remove the safety bolt after the motor is reinstalled.
5. Final step install regulator in the original mounting holes.

