


Installing a 2 Gang Harness

- Stretch the harness out - untangle is necessary: Note: Single wires are marked RF (Right Front),
- Disconnect each 3 wire connector about 32 inches from the switch connection.
- Remove the terminals from the male side of each 3 wire connector (Note: there is another instructions sheet with these steps.)

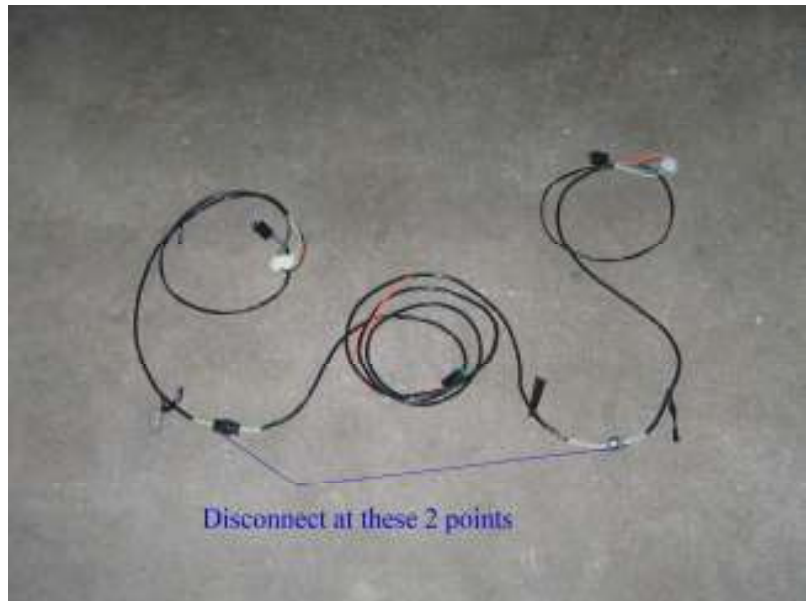

- Wrap electrical tape around the terminals to keep them from “grabbing” the conduit
- Hang the Master switch on drivers door
- Lubricate the 3 wires with liquid soap—feed thru Conduit
- Feed the Hot Feed (red wire) thru the conduit. Note: You may want to extend the ground wire and feed it thru the conduit if you cannot get a good ground within the door.
- Go to the Passenger Door (RF). Hang Switch - Remove terminals from connector—wrap terminals with electrical tape—lubricate the 3 wires—feed thru conduit.
- Replace the terminals into the 3 prong connector. Ensure that the wire colors match up.