


69 Chevelle Installation Instructions

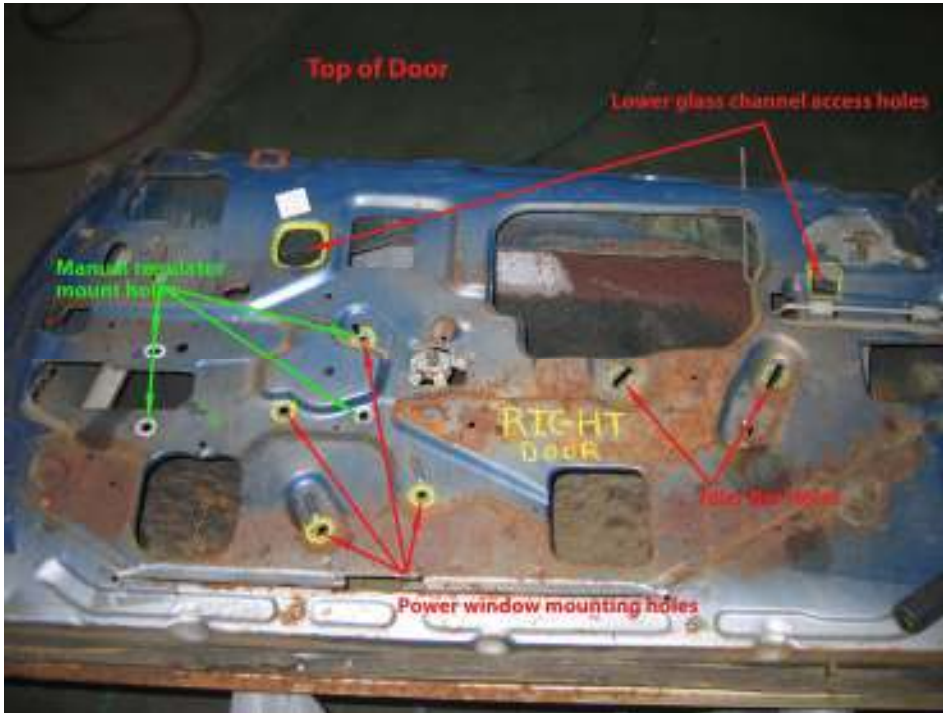


Picture of Door (right side)

Note:

- ◇ Mounting holes for power windows
- ◇ Idler bar mounting holes
- ◇ Lower glass channels access holes
- ◇ Mounting holes for manual regulators

1. Remove lower glass channel from glass
2. Remove idler bar
3. Attach wiring to regulator and position arm at 90° to mounting plate
4. Position glass channels and idler bars on regulator as shown
5. Turn regulator upside down and slide motor into door access hole as shown.



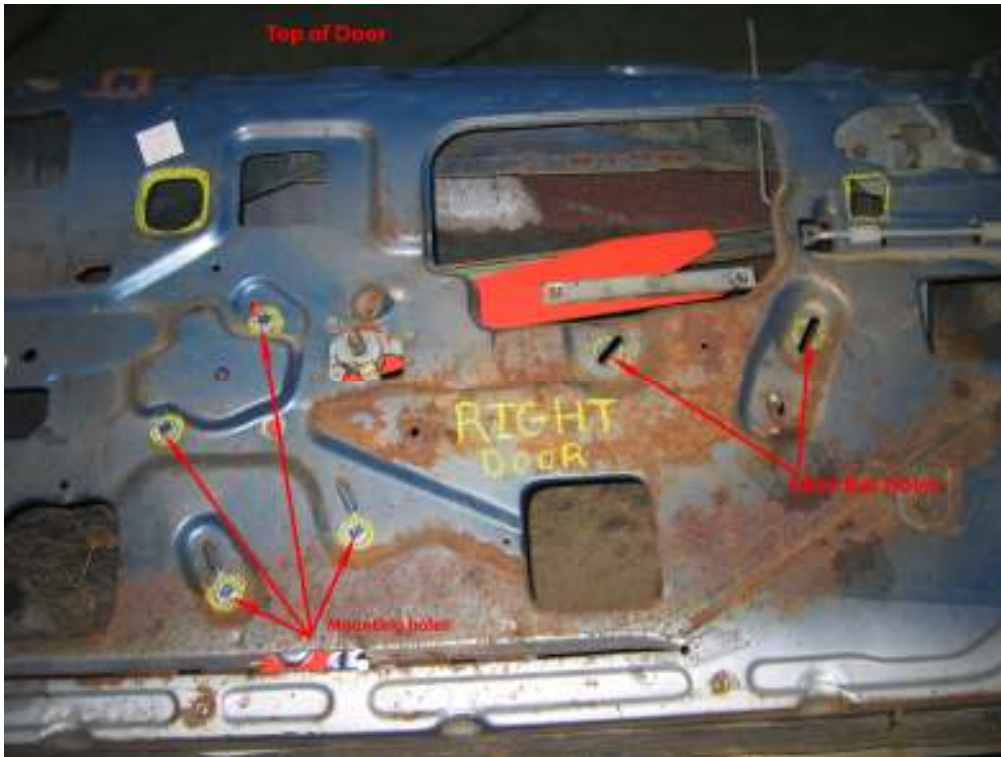

6. Bolt regulator into power window mounting holes
7. With idler bar on roller, pull idler bar down and bolt into position

8. Slide glass down—pull lower glass channel up
9. Bolt lower glass channel to glass thru glass access holes.

