


## 48-52 Ford Truck No Vent Channel

### Instructions

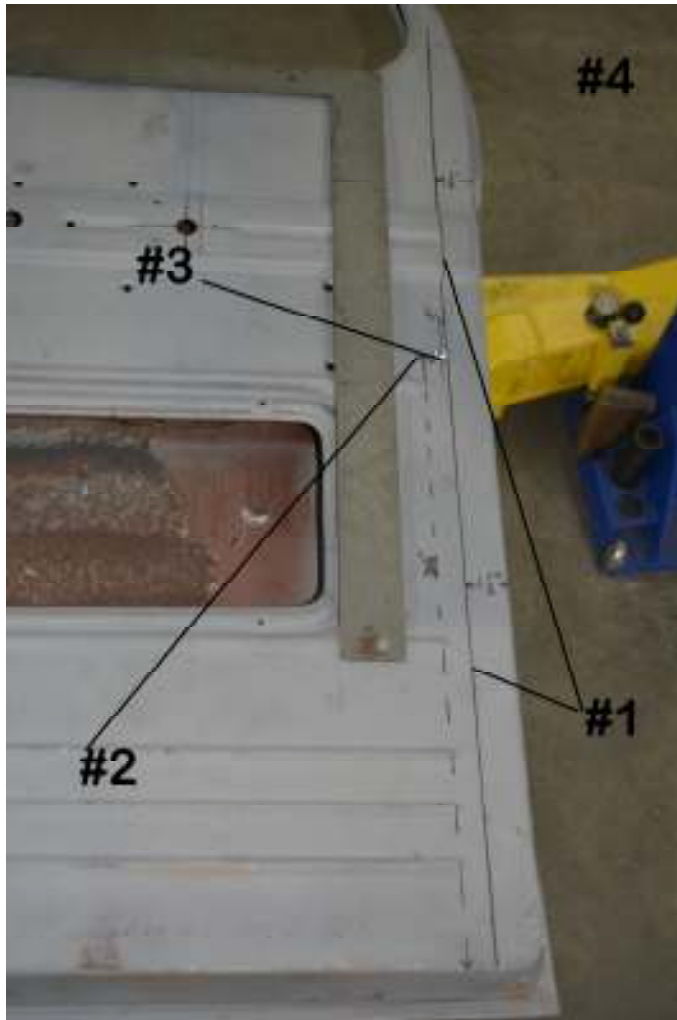

#1 Lay out a square line 1-1/2 " from front edge of door

#2 Measure up from bottom of door 20-1/2 " and mark door

#3 From the line that is 1-1/2 inches from edge of door—at the 20-1/2 inches from the bottom of door: measure toward the back of door 1/4 inch and drill a 1/4" hole to mount the "L" bracket on the vertical channel to the door

#4 After the "L" bracket is mounted, locate and drill a 7/64 hole in the door at the top of the channel. Attach channel to top of door using the screws provided.

