


70-74 Cuda & Challenger Installation Instructions

- Hold glass in full up position and locate new mounting holes

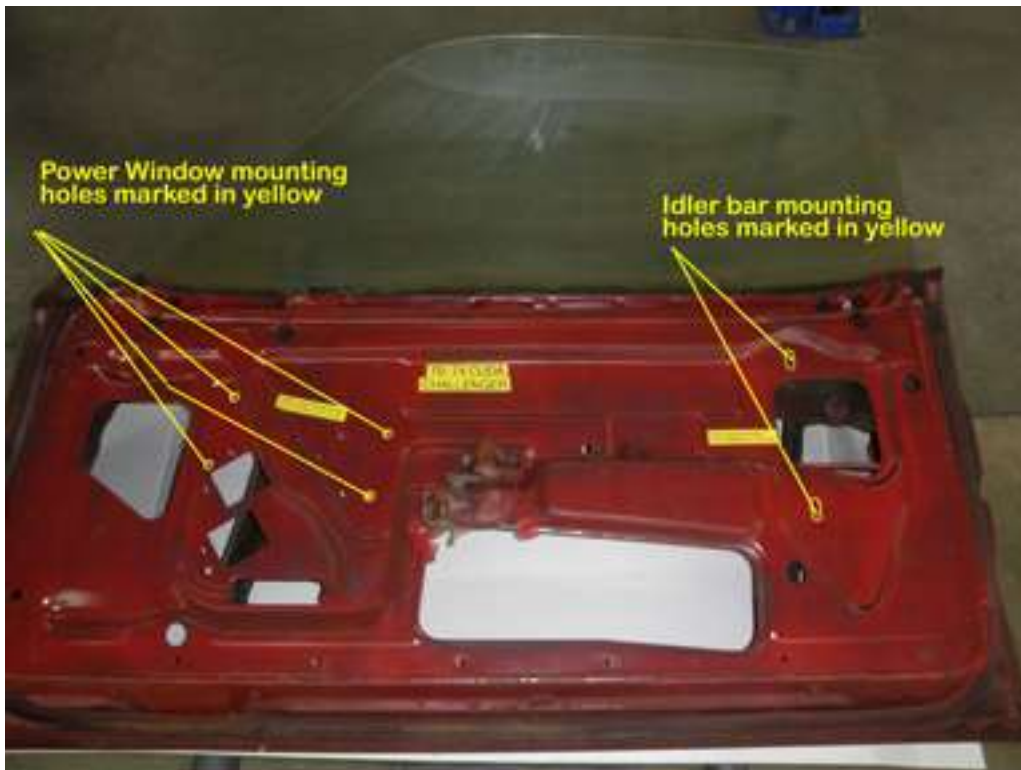

- Slide lower glass channel onto regulator slides.



70-74 Cuda & Challenger Installation Instructions page 2

Without removing the motor, put the regulator in through the large access hole at the bottom of the door. Main arm should be ran straight off the end of the mounting plate.



- Bolt in regulator and idler bar. By moving the idler bar up or down you can level the lower glass channel (Note: use existing idler bar in the Cuda. New idler bars are included in the Challenger)



- Plug up wires, slide glass down by hand and align the lower glass channel.



- Make any necessary adjustments. Then run the window up.